# **ZY-M100 Micro Motion Sensor** Product ManualV1.1

1 Product Function			
■ Fretting detection It can detect small movements, such as hand lifting, hand flicking, hand turning, etc.	Presence detection It can detect the human body standing still, squatting still, stiting still and other static sta  Distance measurement The target distance measurem function can accurately filter targets outside the area.  Log query It can query the records of hun existence and illumination cha		
Motion detection It can detect walking, trotting, fast running, circling, jumping and other movements.			
Illuminance detection Detectable illuminance value			
Adjustable parameters     Various parameters such as	Fault detection		

## 2 Application Area

through app.

detection distance can be set

ZY-M100 micro motion sensor can be widely used in lighting, security, home appliances, hotels, garages, buildings, transportation, IOT Internet of things and other industries that need to detect human micro motion, motion and control the detection distance.

Equipment fault information can

be self checked through app

## 3 Technical Parameter

1. Main parameters of sensor

Pa	rameter item	mini mum	Typical	Maximum	unit	illustrate
system parameter	Transmit power				dBm	Pt
	Beam angle				0	@-3dB
	working frequency				MHz	
	Networking mode					
Functional parameters	Wall mounting: micro motion sensing distance			10	m	
	Top mounted: micro motion sensing radius		5	7	m	
	sensitivity	1	7	9		
	Photosensitivity value			2000	LUX	
	Target confirmation delay time	0	0.1	100	s	
	Target disappearance delay time	0	90	15000	s	
	Product size		Ф61*Н39		mm	
	Opening diameter	53	55	58	mm	


squatting". For sitting still, the detection effect is slightly inferior to that of wall mounting; However, by setting greate sensitivity and longer delay time than wall mounting, more accurate detection can also be realized. Wall mounting can detect sitting, standing and squatting

### 2. Test scope: top mounted

The following figure is the schematic diagram of the detectable area during "top installation".

- (1) "Inching" detection area: it can detect inching (small actions such as leaning head, waving, raising hands, light start, turning books, slightly tilting left and right, back and forth). movement (walking, trotting, fast running, turning, high jump and other movements), existence (standing still, squatting still);
- (2) "Presence" detection area: it can detect the human body in static state, such as standing still, squatting still, sitting still, etc. Detection area (related to installation height and sensitivity parameters);

 existing detection radius: 1 ~ 3M fretting detection radius: 5 ~ 7M



# 4 Installation

## (1) Distribution network

Note: The side wall version uses 5V USB power supply, and the ceiling version uses AC 80-250V power supply.

After the product's residual power supply is connected, the sensor indicator light remains on for 1s to indicate successful power on. Press and hold the reset button for 6s until the indicator light flashes, and enter the distribution network process. Follow the device networking operation on the APP to complete the distribution network.

## (2) Installation

Ceiling ceiling installation: Reserve holes in the ceiling with the size of 55mm, and install them on the ceiling gypsum board with clips on both sides.

Side wall installation: remove the two metal clins, paste the double-sided adhesive tape on the blank space on the back and paste it in a suitable position.



## Quality assurance

Under the normal use of users, the manufacturer provides free 2-year product quality warranty (except panel) replacement, and provides lifelong maintenance quality assurance beyond the 2-year warranty period.

The following conditions are not covered by the warranty:

- 1 Damage caused by external factors such as artificial damage 2 The user disassembles or refits the product by himself
- (excluding panel disassembly and assembly);
- 3 Beyond the technical parameters of this productLosses due to force majeure such as earthquake or fire;
- 4 Installation, wiring and use not in accordance with the
- 5 Beyond the scope of the product's parameters and scenarios